

# Portable Glass Shop Projects


## PGO1B Special Spacer

### Making the Spacer

The spacer can be made of any rigid material that is at least  $\frac{1}{16}$ " (2 mm). The size below is what is used in the video. Because the PGO1B Cutting Bar is 1.5 inches wide, the width of the spacer must be 1.5 or greater. It is important that the spacer be a rectangle. This means that the sides must parallel and the ends square.

If you make your spacer with window glass you will want to add masking tape to the edges. I dulled the glass edges with a file before I added the tape.

Don Abel  
Morton Glass Works

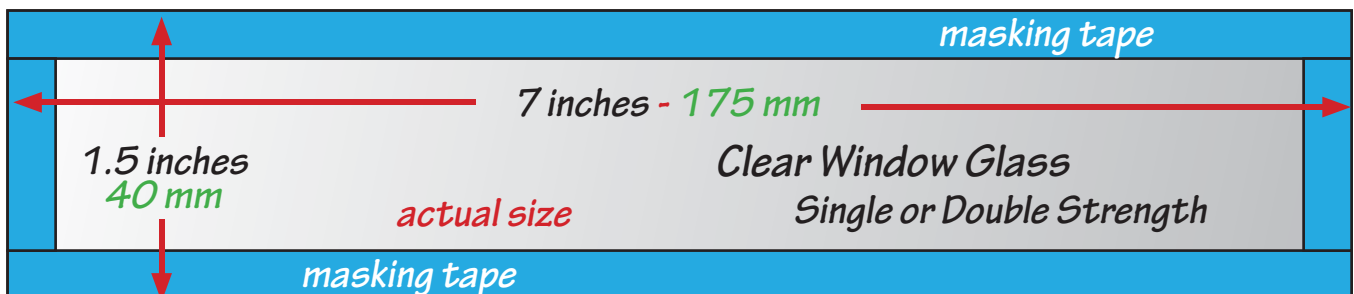

If you decide to print this page, set the printer to 100% or page scaling to none!

You can use the Runner from the Safety Break System for all your Portable Glass Shop breaks!

For free literature, tutorial videos and podcasts visit [www.mortonglass.com](http://www.mortonglass.com) often!

